 



Installation Instruction for Using **EZ-Adjustable Coupler (RS-674)**And Retractable Idler







- 1) Assemble Drives and Crowns with EZ-Adjustable Coupler according to page M-6;
- 2) Cut fabric perfectly with right angles (90°), and fabric length of shades should be the same (Fig.2&3);
- 3) Attach fabric with bottom bar to tube along step line, roll fabric all the way up (Fig. 4);

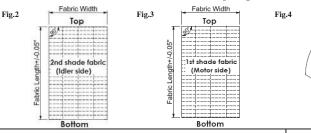


- 4) Insert the fork shaft coupler into 2nd (idler) shade tube right side, refer to Fig. 5 step a), b) & c).
- a) Align the key on drive with groove on tube and slide into tube.
- b) Keep the slot of the fork shaft horizontally.

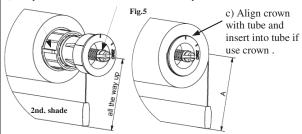

 
- 5) Insert the tang shaft coupler into 1st (motor) shade tube left side, refer to Fig.6 step a), b) & c).
- a) Open 1st shade to same fabric drop length A as 2nd shade.
- b) Insert the tang shaft coupler into 1st shade tube with its tang shaft horizontally. If the drive keyway does not align with tube groove, rotate the tang shaft coupler 180° (This applies for using 2 3/8" tube only).




2. Attach the motor and idler brackets to the ceiling, wall, window frame or molding. Then attach the intermediate bracket loosely so it can be adjusted later.

 

 
3. Install motor side shade first: insert motor end into the motor bracket and make sure it is locked by spring ring.



 
4. Slide loosely tightened intermediate bracket to the tang shaft until it stopped by the should of tang shaft, then tighten the intermediate bracket.



 
5. Install idler shade: a) retract the idler shaft completely; b) align the fork shaft with the tang shaft, make sure fabric drop at same length. c) push the fork shaft into the intermediate bracket, make sure tang shaft & fork shaft joint together.



 6. Release the idler shaft into the idler bracket, MAKE SURE the idler shaft is totally released and in place properly.



7. Fully drop shades to check their bottom bar

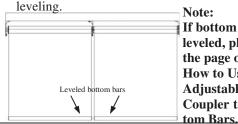

Note:
If bottom bars are not leveled, please refer to the page of
How to Use EZ-Adjustable /Retrac.
Coupler to Level Bot-