

## Cordless Shade Lock / Unlock Position

**Cordless Spring** at the **UNLOCK** position, the shade will roll up automatically;  
at the **LOCK** position, the shade will not rolled up automatically.  
To switch lock / unlock position, just to pull down the shade a little bit. See the picture below.

