


ZM061-5CH

5-Channel Remote Control

Version: 01

Instruction Of Buttons

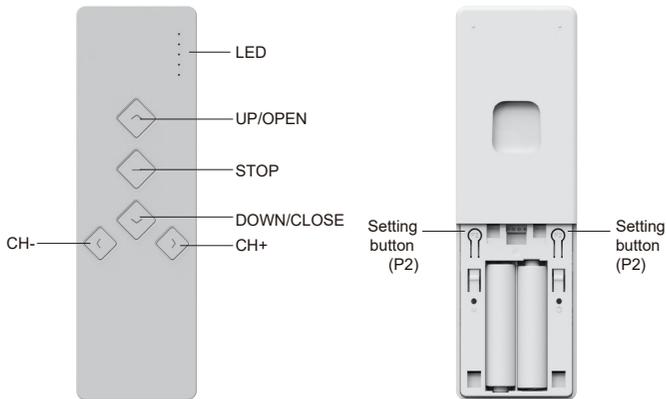

ZM061-5CH
5-channel remote control

Technical specification

Battery: 3V (AAA battery×2)	Battery life: >2 years	Radio frequency: 433.05-434.79MHz
Working temperature: -10C~50 C	Transmitting power: 10 mW	Radio range: outdoor> 150 meters, indoor> 35 meters


Warning

- 1, The remote control couldn't expose to moisture or be struck heavily, or else the remote control life will be affected.
- 2, If the remote control is not so sensitive or the radio range becomes shorter, pls check whether to change the battery.
- 3, Under uni-directional mode, if you press any button more than 20S, the remote control will stop sending radio signals.
- 4, Under bi-directional mode, if you press STOP and P2 for more than 20S or press UP and DOWN for 2 minutes, the remote control will stop sending radio signals.
- 5, It's forbidden to use different type battery to avoid any dangerous risk.
- 6, Dispose of used batteries properly.

Uni-directional / Bi-directional Mode Switch

Note: 1,Both the two P2 buttons on the back are operable.

2,**The factory default mode is Bi-directional mode, repeat the same operation to switch the mode circularly.**

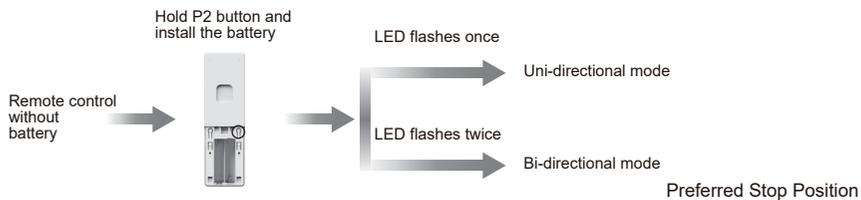

Combination Button Lock / Unlock Operation

Note: 1,Both the two P2 buttons on the back are operable.

2,If there is no operation for 10 seconds, it will automatically exit the setting status.

3,**The factory default is unlock status, repeat same operation to switch status circularly.**

4,When the combination buttons are locked, if you press the combination buttons, the remote control won't send any signal and LED won't flash.

5,Only the transmitting code will be affected if the combination buttons are locked.

