


# ZM062-15CH

## 15-Channel Remote Control Instruction

Version: 01

### Instruction of Buttons

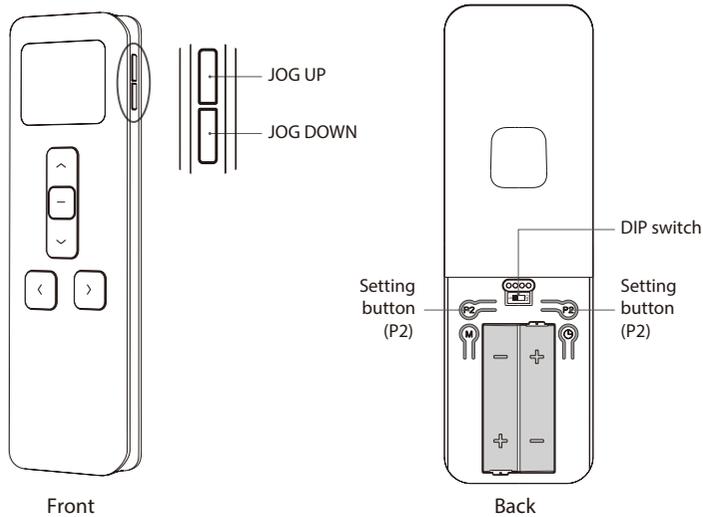

### Key Symbol

^	—	∨	<	>	P2
UP	STOP	DOWN	CH-	CH+	P2

15-Channel Remote Control

### Technical specification

Battery: 3VDC (AAA battery×2)	Battery life: >2 years
Working temperature: -10 C ~+50 C	Radio range: 150 meters outdoor, 35 meters indoor
Radio frequency: 433.05~434.79MHz	Dimension: 144mm×45mm×14.8mm

### Warning

- 1, The remote control couldn't expose to moisture or be struck heavily, or else the remote control life will be affected.
- 2, If the remote control is not so sensitive or the radio range becomes shorter, pls check whether to change the battery.
- 3, It's forbidden to use different type battery to avoid any dangerous risk.
- 4, Dispose of used batteries properly.


### 1. Jog / Tilt Mode

Note: The JOG UP and JOG DOWN buttons only control the channel where the current remote control is located, Release the button to send code.




### 2. DIP Switch Function

Note: The factory defaults to "1" and defaults to bidirectional mode.

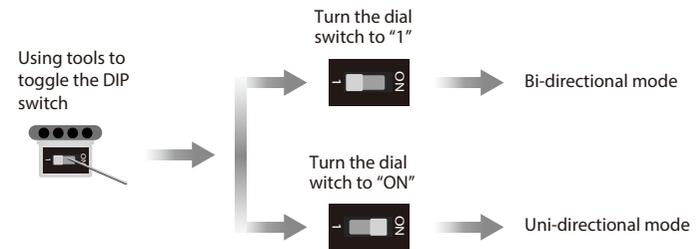


### 3. Lock / Unlock Combo-key Operation

- Note: 1,Both setting buttons (P2) can be operated.  
 2,The factory default is unlock status, repeat same operation to switch status circularly.  
 3,Under lock status, the combo-keys don't work; Under unlock status, the combo-keys will work normally.

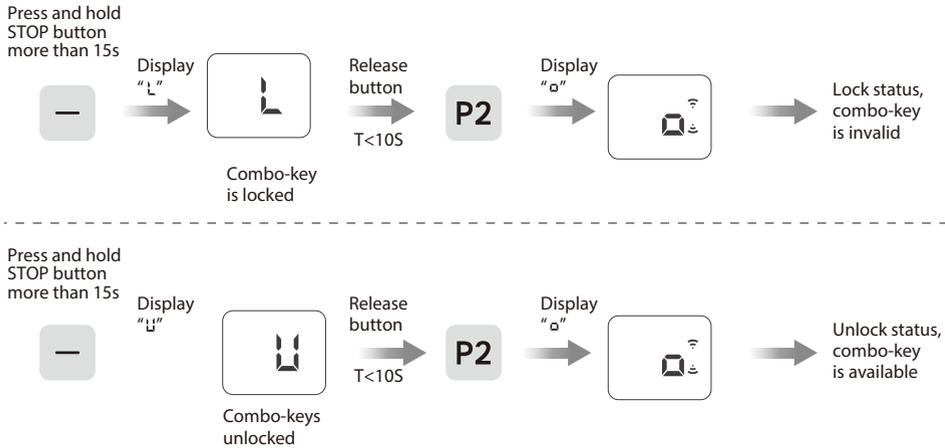


### 5. Battery Check Function (In bi-directional mode)

- Note: 1,Only the paired motor can check the battery and the current channel can only check one paired motor.  
 2,Only the motors which are paired by long pressing STOP button for 2S will have the battery check function.

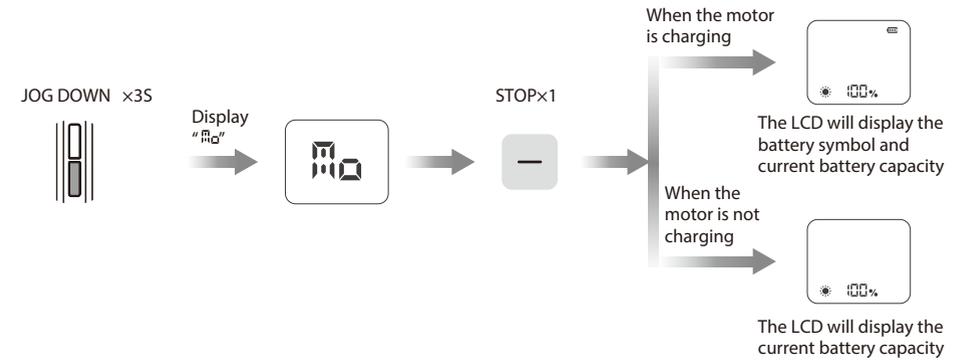

### 4. Set Number of Channels

- Note: In the setting status, press UP or DOWN button to exit quickly.  
 Repeat the same process if you want to adjust the Max. channels.

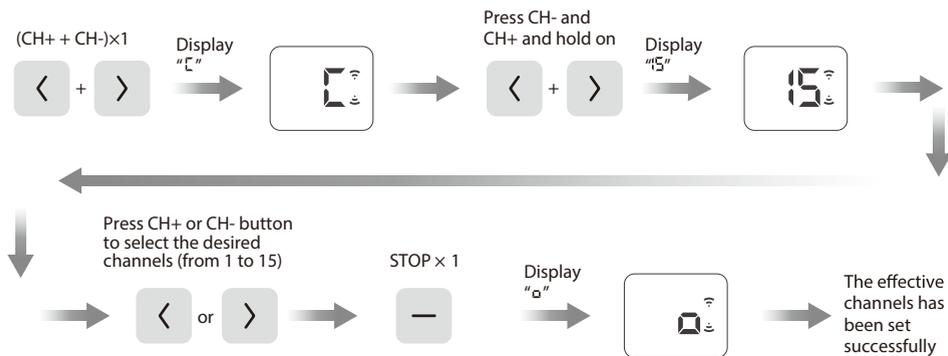

### 6. Motor Percentage Running (In bi-directional mode)

