

Wrapped Bottom Bar



- CLEAN, ELEGANT, EASY TO ASSEMBLE
- HABRIC WRAPPING
- **HABRIC STAYS ATTACHED**
- () AVAILABLE IN ALL COLOURS
- O USE WITH SUNSCREEN OR BLACKOUT



WRAPPED BOTTOM BAR


RS-SO1 WHITE

RS-SO2 ALABASTER

RS-SO3 BRONZE

RS-SO4 ANODIZED

RS-SO5 BLACK

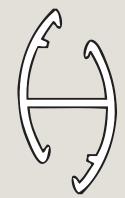

BOTTOM BAR END CAPS

RS-UN9 CLEAR



TRIANGLE ADHESIVE PLASTIC PIPE

RS-SGO CLEAR



INNER RODS

RM-203 4.5MM

RM-209 5.5MM

*Two sizes depending on fabric thickness



Website: www.zmc.ca E-mail: contact@zmc.ca



For more information please contact us at:

Tel: 1.905.856.3838 or 1.800.541.2557




WRAPPED BOTTOM BAR ASSEMBLY INSTRUCTIONS

Attach Wrapped Bottom Bar to fabric by using the Triangle Pipe and Round Rod. Larger rod Ø5.5mm is for thinner and lighter fabric. Smaller rod Ø4.5mm is for thicker and heavier fabric


1. Cutting


Bottom bar and Round Rod are the same width as fabric; Triangle pipe is 1 1/2" shorter than fabric width



2. Attach Triangle pipe to the fabric and flip downwards


Peel the adhesive skin off; stick it along the lower edge of fabric. The space between the Triangle Pipe and fabric should be consistent on both sides






3. Insert Triangle pipe in and wrap the fabric

Slide blind shade through Bottom Bar from the side












4. Press fabric into Bottom Rail and slide Round Rod in


Place blind into "U" shade wood slot

Use Roller to press fabric all the way down along the **Bottom Bar**


Slide Round Rod from side into the Bottom Bar




Assembly tool: Long "U" shade wood

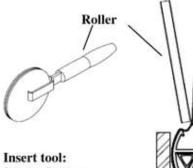







5. Put end caps on the both sides and tightly secure them with rubber hammer



Website: www.zmc.ca E-mail: contact@zmc.ca

